

DVR Guide



How do I record a program?

You can set a recording with just one touch of the remote.

- While in the on-screen program guide, highlight the program you wish to record. And press the **Record** button on your remote. A red dot appears in the Program Information window to indicate the program will be recorded.
- While watching live TV, simply press **Record**. A Recording Started notice appears to indicate recording has begun.



How do I record a series?

1. From the Program Information screen for any episode of the series select the **Record** icon to view the recording overlay screen.
2. Select the **Create a Series Recording** icon and specify your recording options, such as the type of episodes you want to record and how many episodes you want to save.
3. Press the **Record** or **OK Select** button to record the series with these options.



How do I watch a recording?

Press the **My DVR** button and select My Recordings to view a list of your recorded programs.

1. Highlight a program and press **OK Select**.
2. Press the **Play** button on your remote.



How do I view a list of programs scheduled to record?

1. Select the **DVR** icon from the Quick Menu.
2. Select Scheduled Recordings.







DVR Guide


How do I pause, rewind, and instantly replay live TV?

Press **Pause** , **Rewind**  or **Instant Replay**  on your remote. Press the **LIVE**  button on your remote to return to live TV.

How do I play in slow-motion?

Press **Pause** , then press **Fast Forward**  to view in slow-motion in forward mode. Or press **Pause** , then **Rewind**  to view slow-motion in reverse mode.

How do I change channels when I am recording?

When you are watching live TV and you get a message saying that your recording is in progress, select  to Continue recording, change channels. You may now watch another program without interrupting your recording.

How do I start a recording early or extend the end time?

1. Select a program from your list of Scheduled Recordings. Select the Set or Cancel a Recording icon.
2. Select the Modify series recording icon, then View all settings, to change the start and end times for the entire series, or the Modify recording settings for this program icon to change the start and end times for a single episode.

How do I modify my Series Priority List?



1. Select **DVR** from the Quick Menu, or **My DVR** on your remote.
2. Select Series Priorities.
3. Highlight a listing and use the Page up/down  buttons to modify the priorities.

Important notes about your DVR

- DVR is set to save programs until "Space is Needed." You can change the delete priority to "Until I Delete" for all programs or for individual programs.
- You can easily determine how much disk space is available by viewing the My Recordings page. The blue bar at the top of the list indicates how much disk space is occupied.
- Parental Locks will not prevent a program from recording. However, the audio is muted and no video appears while it records.

For more information, visit www.fullchannel.com