

## Arris Touchstone® Telephony Modem Digital Phone Adapter

**Coaxial cable** from the cable wall outlet connects to the Adapter.


**Ethernet cable** connects to the appropriate ports on the Adapter and your PC or router.

**Power cord** should be plugged securely into the electrical outlet or a surge protector.

**USB port not used** with configurations on the Full Channel network.

*Only Full Channel rental modems and Digital Phone Adapters are guaranteed to be free from manufacturer's defect for as long as you rent the device. If your rental modem should fail for any reason—excluding damage or abuse—it will be replaced at no additional charge. Also, any future modem hardware upgrades will be provided at no additional charge.*

*Should you choose to purchase a modem from Full Channel instead of renting one from us there is a limited guarantee against defect for a term of one-year. Future technology upgrades may require additional purchases.*

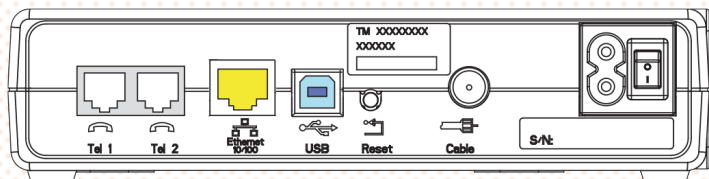

◀ **Arris Touchstone® Telephony Modem**  
A combined Digital Phone Adapter and  
Broadband Internet Modem included with  
Full Channel Digital Phone service.



### Where to Turn for Help:

If you just can't seem to get things working yourself you can always turn to us for help.

**Online help, visit:**  
[www.fullchannel.com/help](http://www.fullchannel.com/help)

**24-hour Internet support, call:**  
**247-1250**